



Acer Iconia A110 Battery Replacement

Use this guide to replace your battery if your tablet won't keep a charge or seems to die too fast.

Written By: Andrea





INTRODUCTION


This guide will lead you step-by-step through how to remove the Iconia A110 battery.


TOOLS:

- [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — Battery

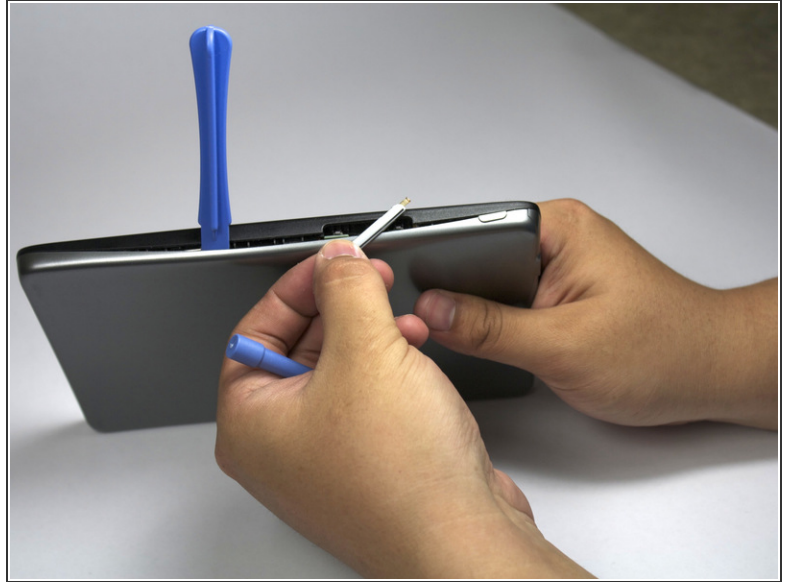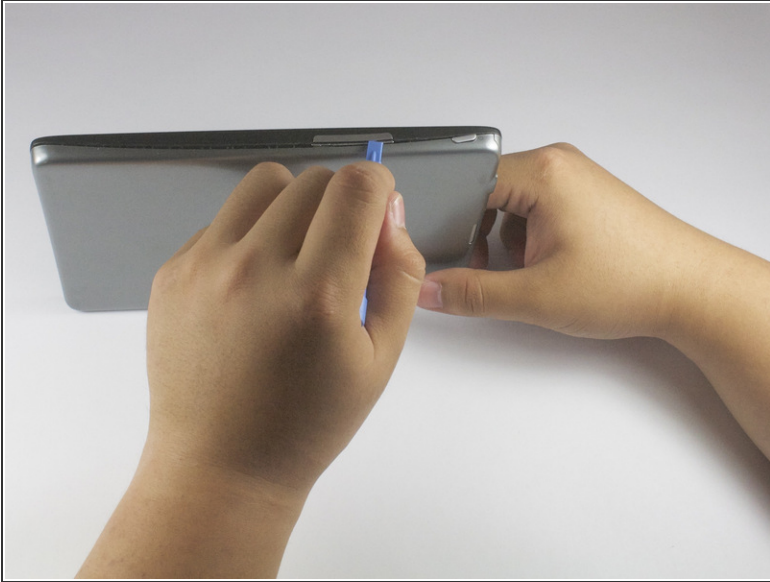

 Before taking apart your tablet, make sure the device is powered off.

- Pry open the right side of case with the plastic opening tool. If necessary, keep a tool lodged into the side to keep the case from closing.
-  During this process, the volume button and/or power button may fall out.

Step 2

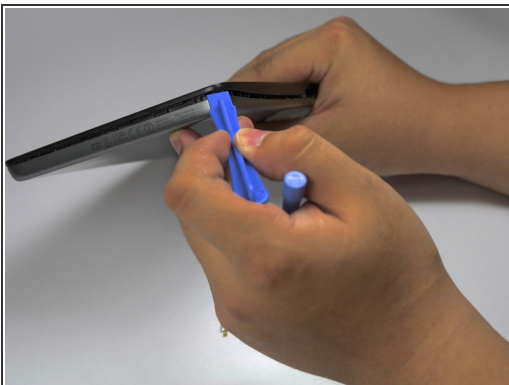

- Pry open the left side of the case with a plastic opening tool. The backside of the tablet should now separate completely from the front.

Step 3



- Using the plastic opening tool and spudger, carefully pry up the battery from the case.
- ⓘ You should hear the adhesive ripping as you do this.
- Once the battery is no longer adhered to the case, detach the dongle that connects the battery to the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 03:20:03 AM.